




INSTRUCTIONS

K00065TO75KIT – Kit to convert belted earlage adapter (K00065) to gearbox earlage adapter (K00075)

GO FROM THIS:

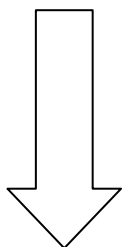

TO THIS:

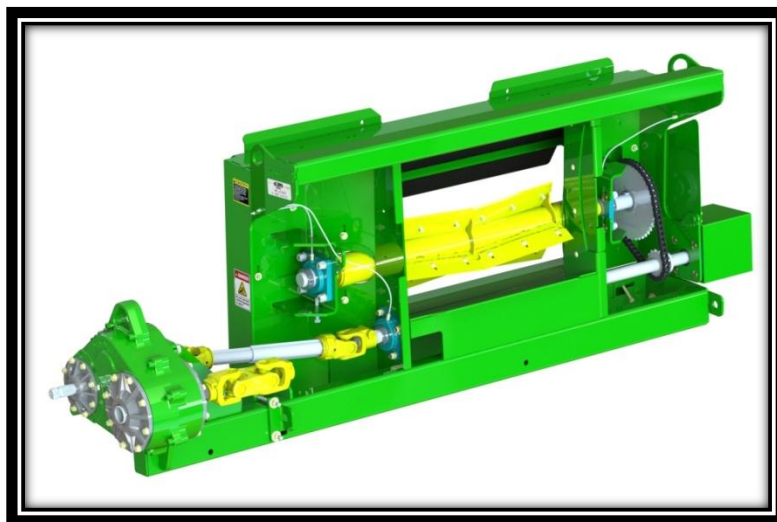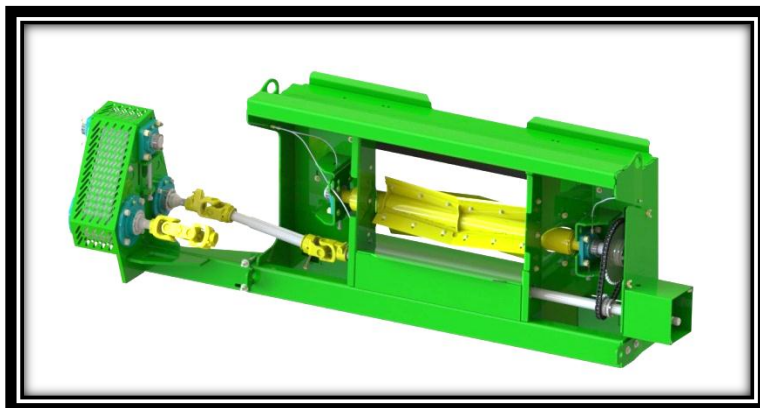


KOOIMA
COMPANY




1-800-522-8874



- 1) Remove all belt bolt-on components, so you are left with a bare frame like this:

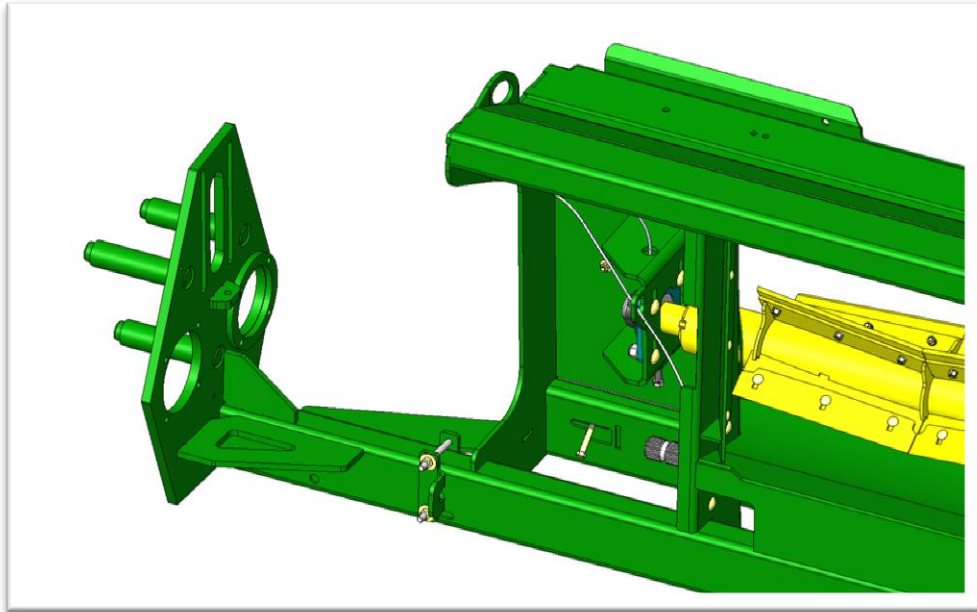

- 2) Cut off the large plate and gussets, so you are left with a bare tube and front gusset:

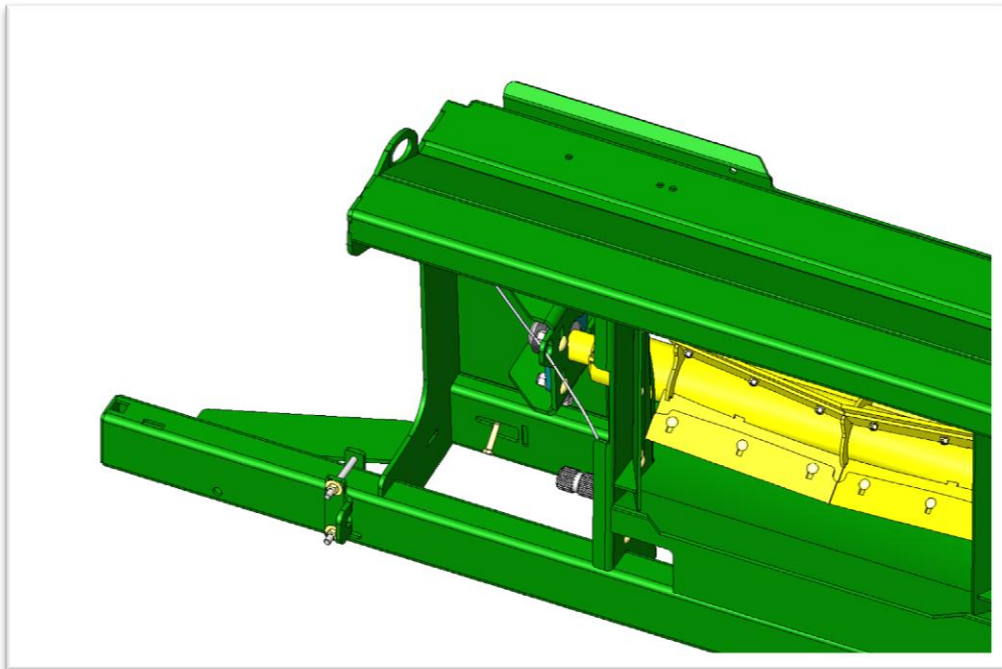


3) Weld on the kit plates as shown. Weld all joints solid, both sides, all around.

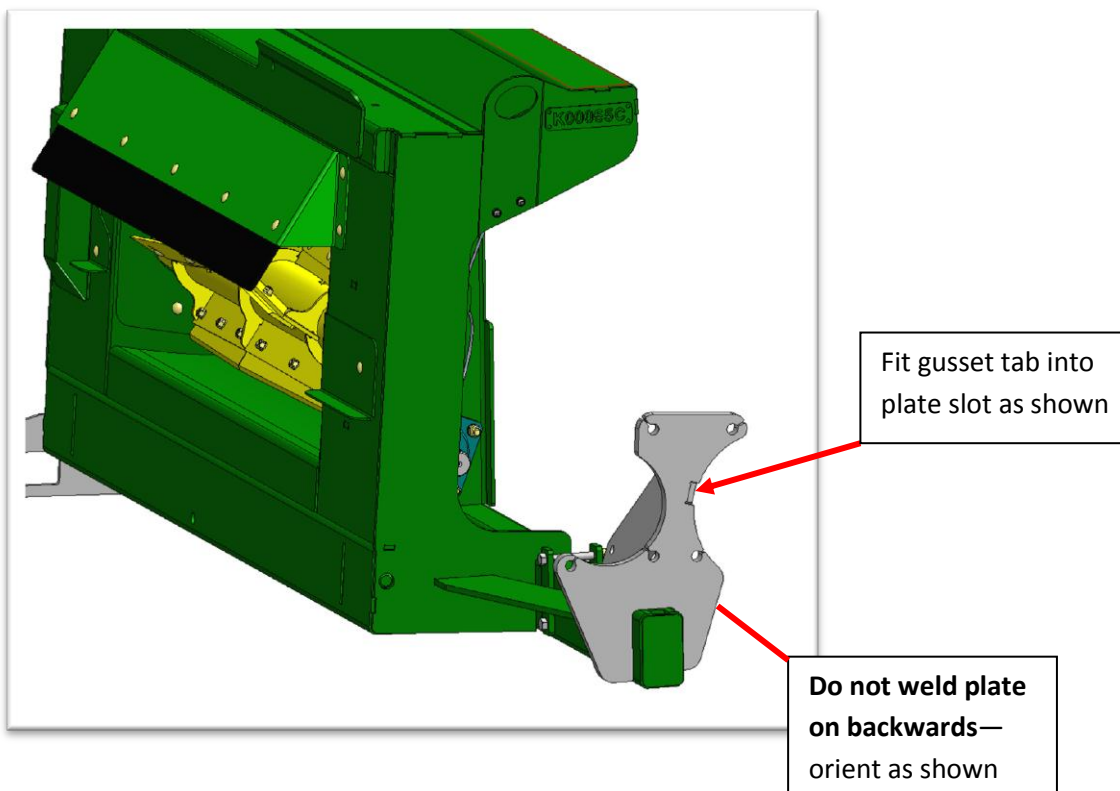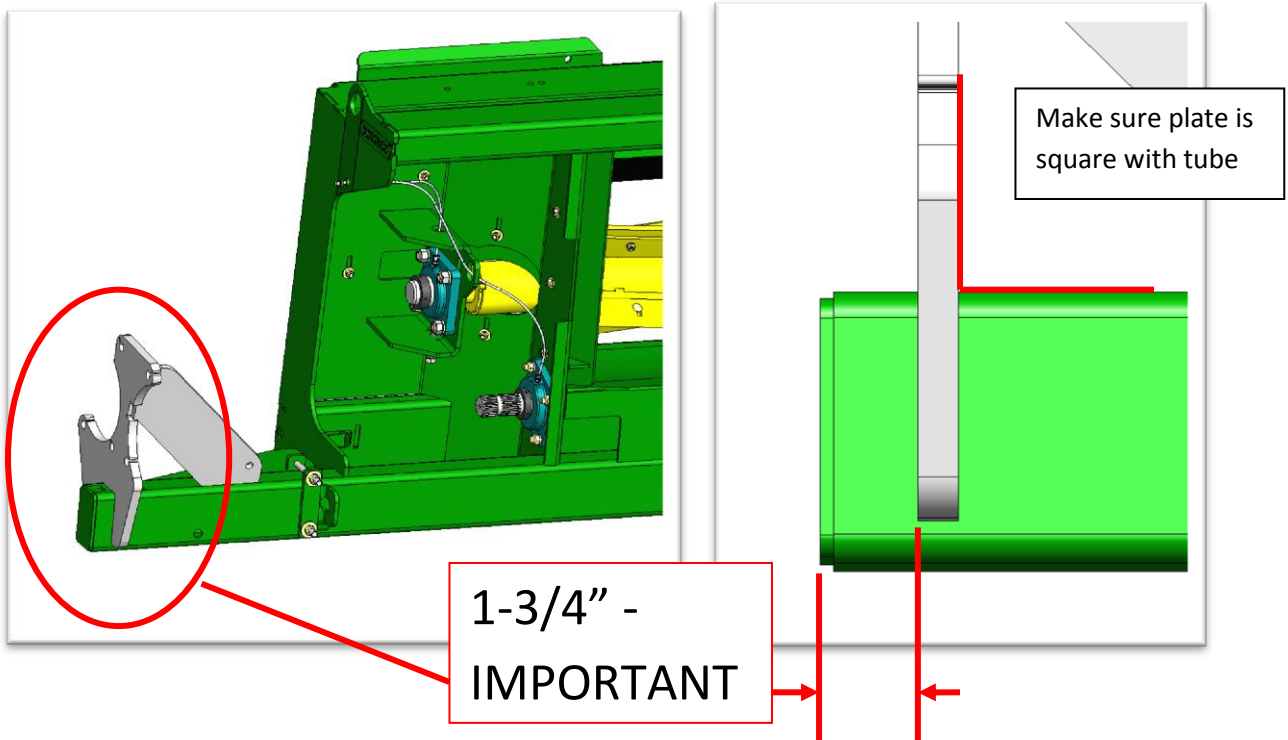


4) Bolt the gearbox and shield to the plate as shown, using the bolts provided with the kit.

3/8" x 1" hex bolt
3/8" lock washer
Qty 4 each


5/8" x 2-1/4" hex bolt
5/8" lock washer
5/8" flat washer
Qty 5 each

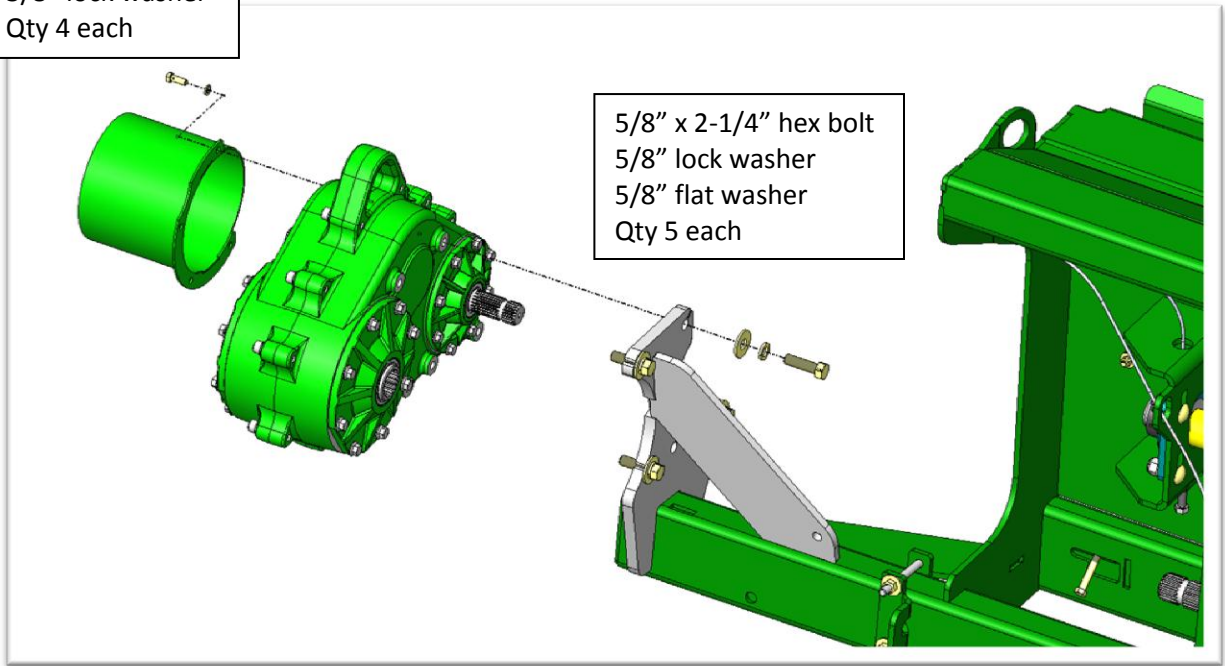

5) Reattach driveshaft.

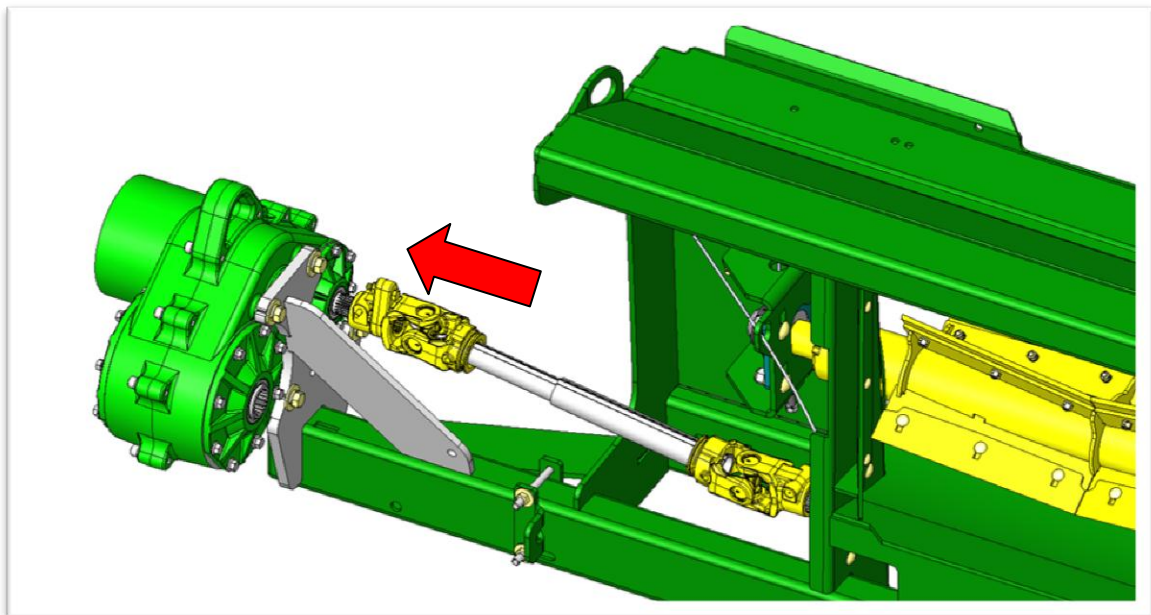

- 6) Add oil to the gearbox, up to the level hole. You should use nearly all of the included 2 gallons of synthetic gear oil.

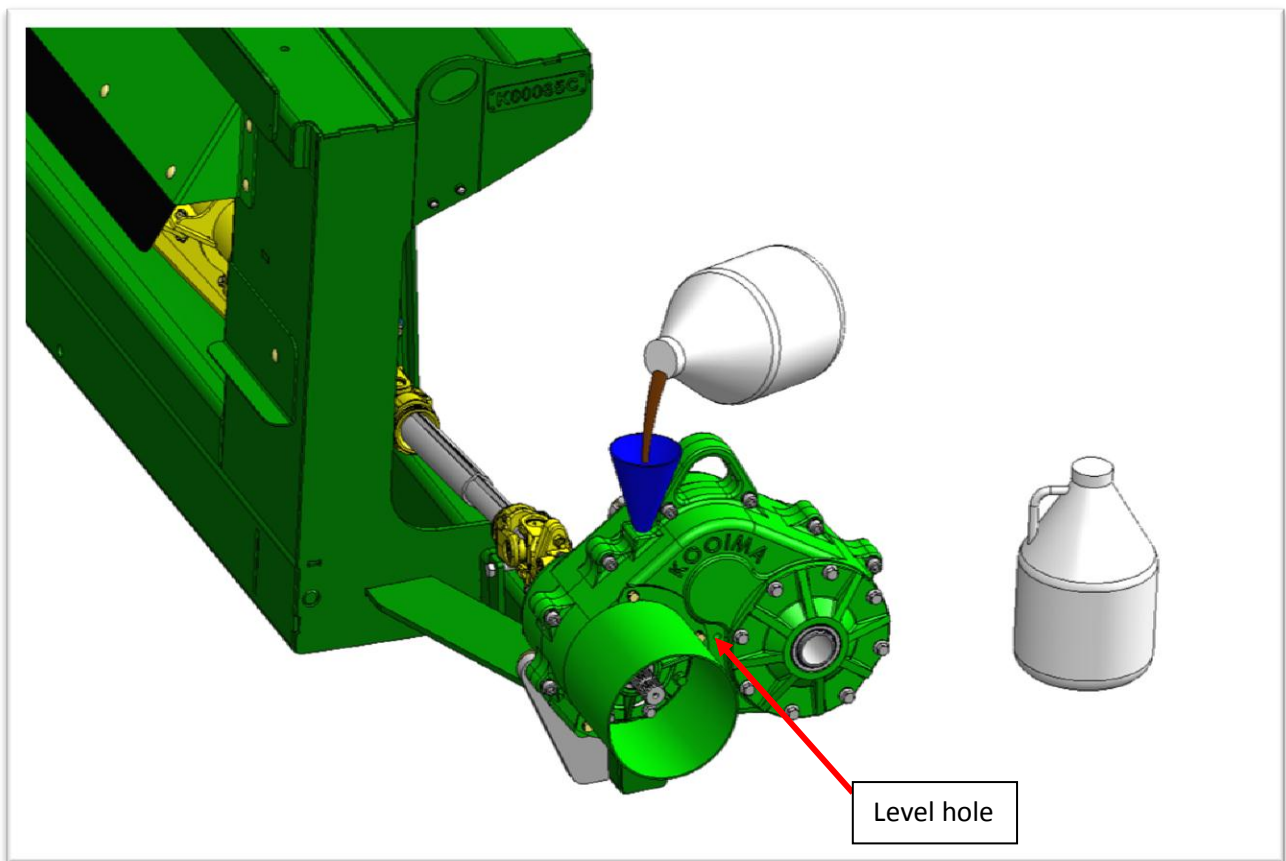

Your upgraded adapter is now ready for use!

